

8" Digital Photo Frame



Please read this user's guide before using your new photo frame.

Package contents

 
- Photo Frame
- AC Adapter
- Remote Control
- User's Guide
- Quick Start
- Remote Control Holder

Features

- 16Mb built-in flash memory stores up to 14 pictures
- Add additional pictures with the 4-in-1 Card Slot (supports up to 8GB memory card)

① Power the Photo Frame

Connect the supplied AC adapter to the **DC 9V** jack and plug into a standard household outlet.

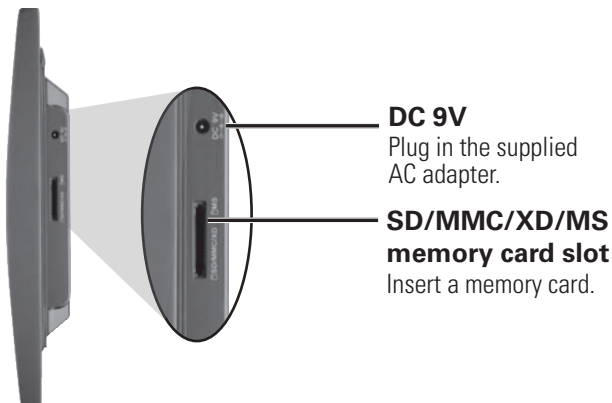


② Position the Frame

Keep the frame away from strong magnets, heat sources, direct sunlight, and excessive dust.

Hanging Slots

 Hang your frame vertically or horizontally or mount the remote control holder.

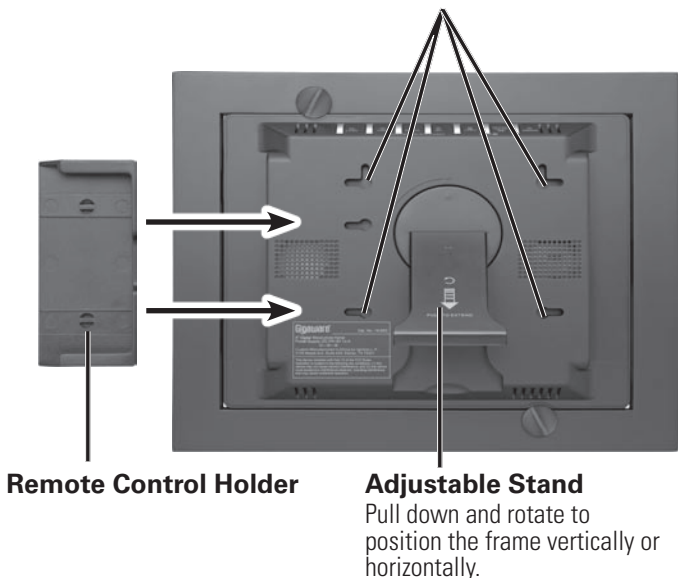

③ Setup

To define frame settings, complete the following steps:

1. Press **MENU** to enter the main menu.
2. Press **PREV** or **NEXT** to navigate to **SETUP** and press **PLAY/PAUSE/MODE**. The setup menu appears.
3. Use the **PREV**, **NEXT**, **UP**, or **DOWN** buttons to navigate to a setting.
4. Use **PLAY/PAUSE/MODE** to select options.

TFT Brightness: -3 to +3

Slide Show Time: 5, 10, or 30 seconds display time for each photo.

Transition Effect: No Effect, Blind Horizontal, Blind Vertical, Coloration Hor (horizontal), Coloration Ver (vertical), or Random.

OSD Language: English, French, or Spanish.

Show Type: Fit Screen or Full Screen.

Default: Restores all options to factory settings.

Exit Setup Menu: Return to the main menu.



POWER

Turn the frame on or off.

PLAY/PAUSE/MODE

Select functions.

MENU

Access the main menu.

UP/COPY/DELETE

Navigate to, copy, or delete a photo.

DOWN/ROTATE

Navigate to or rotate a photo.

 
PREV


Navigate to or view the previous photo.

NEXT

Navigate to or view the next photo.

Use the Remote Control

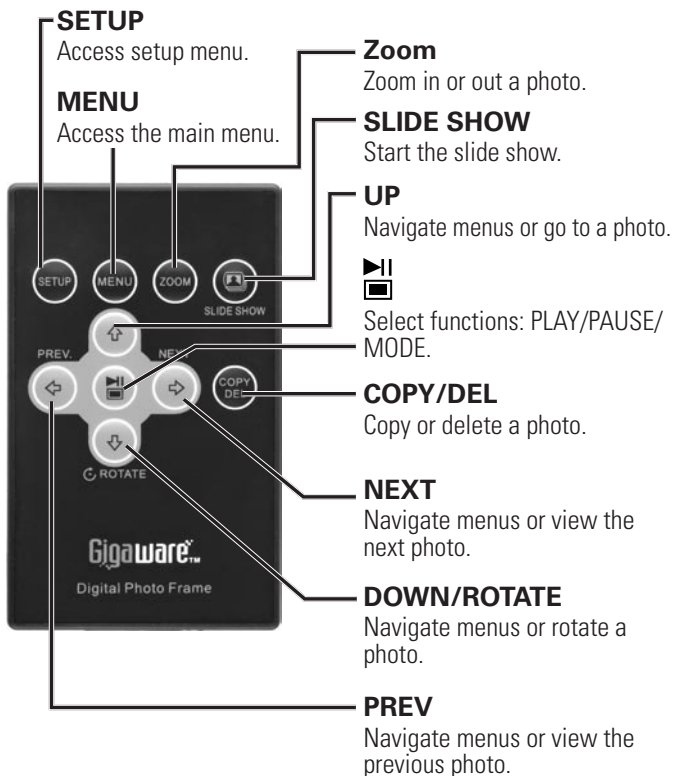

 **Note:** Your remote comes with a battery installed. Remove the plastic tab before using the remote.

Viewing Photos on Your Frame

Your frame can read memory cards up to 8GB. It automatically displays saved photos and photos from a memory card in the **SD/MMC/XD/MS** slot.

1. Press the **POWER** button to turn on the frame.
2. Insert a memory card into the labeled slot. The frame enters Slide Show mode after several seconds.
3. Press **PLAY/PAUSE/MODE** to enter Browse mode. The frame displays a single image. Use the **PREV** and **NEXT** buttons to select a photo.
4. Press **PLAY/PAUSE/MODE** again to enter Thumbnail mode. Small images of the memory card's contents appear. Use the **PREV**, **NEXT**, **UP**, and **DOWN** buttons to navigate the pictures.




Note: *The aspect ratio of the screen is 4:3. Photos with different ratios (for example, 5 × 7 or 4 × 6 photos) appear with black bars on the sides. Photos shot in Panoramic mode (with a 4:3 ratio) appear without the bars. This is a normal function of the frame designed to retain image quality.*

Copying Photos to Your Frame

To copy photos from a memory card to the frame's memory:

1. Locate the photo and press **UP/COPY/DELETE**.


2. Select **YES** when asked if you want to copy the photo, then press **PLAY/PAUSE/MODE**. The frame can copy up to 14 photos to the frame's memory.

 **Note:** You can rotate photos clockwise by pressing **ROTATE** repeatedly while the photo is displayed. Rotated photos are copied in the rotated position.

Deleting Photos from your Frame

To delete a photo from your frame's memory:

1. Remove any memory cards from your photo frame.
2. Locate the photo and press **UP/COPY/DELETE**.
3. Select **YES** when asked if you want to delete the photo, then press **PLAY/PAUSE/MODE**. The frame deletes the photo from the frame's memory.

 **Note:** The delete function only deletes photos from the frame's memory, not from a memory card.

Replacing the Battery in the Remote Control

Replace the battery if the remote stops working. Press the tab on the battery compartment tray, slide the battery compartment tray out, and insert a new battery (CR2025) plus "+" side up. Then slide the tray back until it clicks.





Battery Notes:

- *Keep button-cell battery away from children. Swallowing a button-cell battery can be fatal.*
- *Dispose of the old battery promptly and properly. Do not burn or bury it.*
- *Use only a fresh battery of the required size and recommended type.*
- *Replace the battery if the remote control stops operating properly.*



Cautions and Warnings

- Do not insert any foreign objects into the frame through openings; do not spill or spray any liquids on or in the frame (this may result in a fire or electric shock). Do not place anything heavy on the frame.
- To ensure proper ventilation and proper operation, never cover or block slots or openings. Keep the frame away from open flames, such as fires or candles. Do not use the frame in temperatures higher than 95°F/35°C.
- When cleaning, make sure the frame is unplugged from the power source. Do not use liquid cleaners or aerosol cleaners. Use a cloth lightly dampened with water for cleaning the housing only.
- To avoid damaging your photo frame, use the provided power adapter or an adapter with proper specifications.

Specifications

File format	JPEG
Screen Resolution	800 × 600
Power source.....	DC 9V 1.5A
Compatible RAM	SD/MMC/XD/MS
Operating temperature	40 – 98°F (5 – 35°C)
Dimensions (W × H × D)	10.35 × 8.72 × 1.5 in(26.3 × 22.1 × 39 cm)

Specifications are subject to change and improvement without notice.
Actual product may vary from the images found in this document.

FCC Information

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by Ignition L.P. may cause interference and void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

Limited Warranty

Ignition L.P. warrants this product against defects in materials and workmanship under normal use by the original purchaser for **ninety (90) days** after the date of purchase. IGNITION L.P. MAKES NO OTHER EXPRESS WARRANTIES.

This warranty does not cover: (a) damage or failure caused by or attributable to abuse, misuse, failure to follow instructions, improper installation or maintenance, alteration, accident, Acts of God (such as floods or lightning), or excess voltage or current; (b) improper or incorrectly performed repairs by persons who are not a Ignition L.P. Authorized Service Facility; (c) consumables such as fuses or batteries; (d) ordinary wear and tear or cosmetic damage; (e) transportation, shipping or insurance costs; (f) costs of product removal, installation, set-up service, adjustment or reinstallation; and (g) claims by persons other than the original purchaser.

Should a problem occur that is covered by this warranty, take the product and the sales receipt as proof of purchase date to the place of purchase. Ignition L.P. will, at its option, unless otherwise provided by law: (a) repair the product without charge for parts and labor; (b) replace the product with the same or a comparable product; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of Ignition L.P. New or reconditioned parts and products may be used in the performance of warranty service. R-epaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

IGNITION L.P. EXPRESSLY DISCLAIMS ALL WARRANTIES AND CONDITIONS NOT STATED IN THIS LIMITED WARRANTY. ANY IMPLIED WARRANTIES THAT MAY BE IMPOSED BY LAW, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY AND, IF APPLICABLE, THE IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE, SHALL EXPIRE ON THE EXPIRATION OF THE STATED WARRANTY PERIOD.

EXCEPT AS DESCRIBED ABOVE, IGNITION L.P. SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO THE PURCHASER OF THE PRODUCT OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE AND ANY LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT AND ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF IGNITION L.P. HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some States do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from State to State. You may contact Ignition L.P. at: Ignition L.P., 3102 Maple Ave. Suite 450, Dallas, TX 75201 02/09

For product support, call

1-866-315-0426



Protect the environment by recycling used electronics. Go to E-CyclingCentral.com to find an electronic recycling center near you.